

ON BATTERY MASSAGE BRUSH FACE AND BODY

INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
 - ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ❑ Cleaning and maintenance must not be made by children without supervision.
- ❑ In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.
- This device, designed for home use, complies with standards relating to this type of product.

SPECIAL SAFETY FOR THIS UNIT

- Always consult a doctor before using the brush, in case of skin problems.
- Do not use on skin lesions or rashes, severe acne, infections or other serious skin conditions.
- Do not use on skin burned by the sun.
- Do not use in case of serious skin allergies.
- Do not use with drugs that cause skin sensitivity.
- Do not use on open wounds.
- Do not use with a micro-dermabrasion treatment.
- Do not use in case of recent cosmetic surgery.
- Do not use on young children.
- Do not leave water on the face before using the brush.

- The device is splash-proof, but, never immerse the device in water, as moisture could penetrate inside and damage the electronic components.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.




The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

TO KNOW ITS UNIT

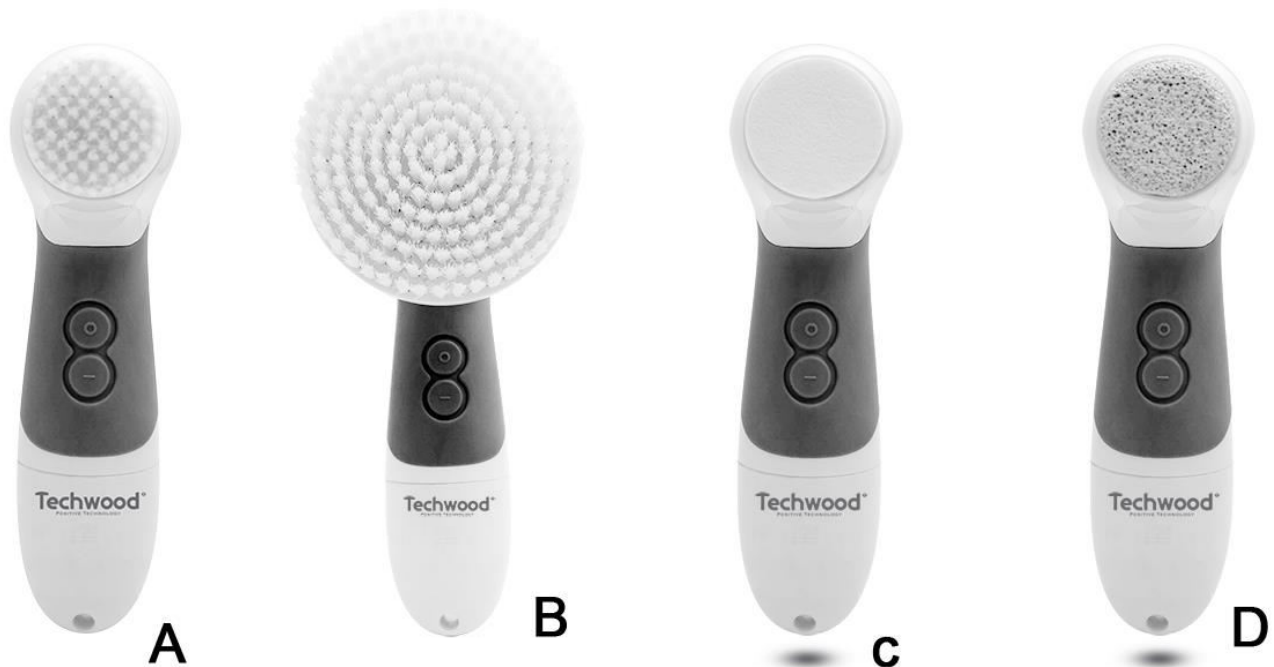

- A. Exfoliating face brush
- B. Exfoliating body brush
- C. Sponge for the face
- D. Pumice

USE

Choose an accessory and attach it to the brush.

Note: Use a headband to keep your hair away from your face and prevent them from getting tangled.

Apply a lotion or serum cleanser.

Place the applicator flat on the facial skin and press the "On" button on the handle.

Note: The brush can also be used for dry brushing on the face or body. This will help reduce cellulite.

Move the device on the skin in a slight circular motion.

ACCESSORIES

Exfoliating face brush (A)

Apply a facial cleanser on the brush for gentle but deep cleansing to remove makeup, dirt and / or perspiration that may clog pores.

Note: The Exfoliating Brush polishes your skin to leave a fresh and healthy glow.

Exfoliating body brush (B)

Apply a soap, cleaner or lotion to the brush. Put the device on the part of the body to be treated to gently micro-massage the skin, while exfoliating and deep cleansing.

Note: This will give an energetic and radiant skin.

Sponge for the face (C)

Apply a moisturizing product on the sponge to massage and rejuvenate the skin gently and, to improve circulation.

Note: Helps absorb the moisturizer, or serum to make the skin healthier and invigorated.

Pumice (D)

Soak the part of the body with calluses to soften them.

Dry by tapping.

Use pumice stone with a circular motion.

Note: This will remove callosities and dead cells from the plant feet (for example), heels, elbows or knees, for softer and younger skin.

BATTERY INSTALLATION

1. Open the battery compartment on the bottom of the unit by pulling down (in the direction of the arrow).
2. Insert 4 x LR6 OR AA batteries (not supplied) into the battery compartment.
Note: Take care to respect the polarity.
3. Close the battery compartment cover.

CLEANING AND MAINTENANCE

Clean the outside of the apparatus with a sponge or slightly wet linen.

Only accessories can be washed with water.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

Accessories can be cleaned from time to time with medical alcohol at 70.

STORAGE

- Ensure the unit is completely cool and dry.
- Keep the appliance in a cool, dry place.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supplier 4 x1,5V DC LR6 or AA batteries (not provided)

Norm Class III

Made in PRC

The characteristics can change without prior notice

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable.

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

ENVIRONMENTAL PROTECTION

(Destruction of batteries)

To remove the batteries:

- Open the battery compartment and retrieve the batteries.
- THE BATTERIES MUST BE ELIMINATED IN A SAFE WAY.
- DO NOT THROW IN A TRASH CAN, BUT GIVE IN CENTRE OF WASTE.

Imported by Sotech International

" LE PERIPOLE " N°A-107

33, Avenue du Marechal de Lattre de Tassigny

94120 Fontenay sous-bois - France