

Techwood[®]
POSITIVE TECHNOLOGY

TFR-530

ELECTRIC DEEP FRYER



Instruction manual

This fryer comes with a large and 2 small baskets !



IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.

- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years of age.
- Children shall not play with the appliance.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution! Do not allow small children to play with the foil:

□

THERE IS A DANGER OF SUFFOCATION!

- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.

- ❑ Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- ❑ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- ❑ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc ... & the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.

- Always remove the plug from the wall socket when the appliance is not in use.
- When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.
- The appliance must be used and rested on a table or flat & stable surface.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- Regarding the instructions for cleaning, please refer to the below paragraph of the manual.
- This appliance is only intended for household use.

 
WARNING: RISK OF BURNS.

During operation, the surface temperature of the device can be very hot.

The heating parts remain hot long after stopping the machine.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

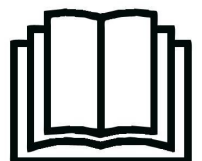


The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with



household waste, but filed to the sorting of the locality.
Waste recovery can help preserve our environment.

 The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.

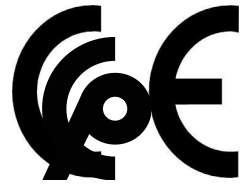


The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "HOT WALL" warns the user that the walls of the unit can become very hot, and to take precautions as required.



 The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.

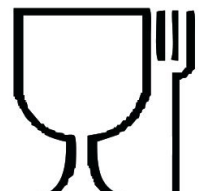

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



The symbol "CMIM marking" is the guarantee of compliance with the harmonized Moroccan Standards, optional, which translate the essential requirements into technical specifications. These standards are not mandatory but guarantee compliance with the essential requirements.

For more information : <http://www.quefairedemesdechets.fr>

 
TO KNOW IT'S UNIT



- 1. on / off switch and timer
- 2. Power indicator (red)
- 3. Thermostat
- 4. Temperature indicator (green)
- 5. Heating element
- 6. Frying basket
- 7. Carrying handle (on each side)
- 8. Fryer



- 9. Safety switch

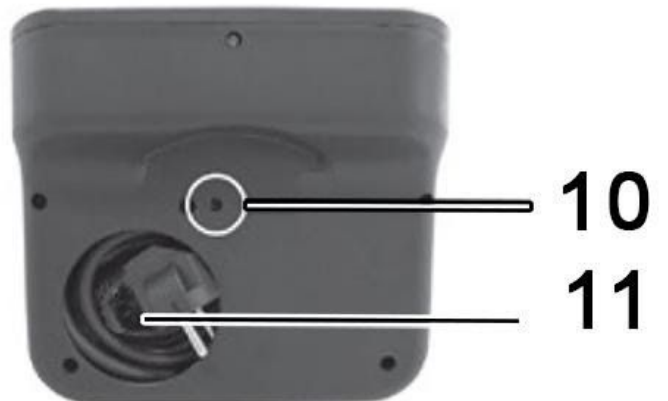

10. Reset button
11. Cable housing

AUTOMATIC STOP

The unit is equipped with a built-in timer, it automatically turns off the device when countdown reaches zero. The unit can be manually turned off by turning the timer knob, counter clockwise, to zero.

FIRST USE

Before first use, remove the device and all accessories from the packaging.

- Clean the apparatus according to the instructions in "CLEANING AND MAINTENANCE " paragraph.
- Place the machine on a suitable flat, stable surface.

USE

1. Plug the power plug into a grounded wall outlet.
2. To preheat the fryer, turn the timer knob for 5 minutes.

Notes: The heat indicator lights up.

The timer starts counting down the programmed cooking time.

During the process of frying with hot air, the heating indicator lights up and goes out from time to time. This indicates that the thermostat is working to maintain the pre-set temperature.

3. When the fryer is hot and ready to use, program the required cooking time.

Notes: See the 'Settings' section in this chapter to determine the correct temperature and the required preparation time according to the ingredients.

Always take the basket in or out of the fryer using the basket handle.

4. Place the ingredients in the basket.

Note: Never exceed the MAX indication as this may affect the quality of the frying and / or let the oil overflow from the fryer.

5. Insert the basket in the fryer.

6. If Some ingredients should be shaken halfway through cooking.

do it this way : pull the basket out of the appliance, shake it gently and put the basket back in the fryer.

Tip: If you have to shake the ingredients, set the timer to half of the preparation time. When the timer rings, shake the basket with the food, reposition the basket in the fryer, and then set the timer again to the remaining cooking time. (Second half of the time).

7. At the end of the programmed cooking, the timer sounds! Remove the basket from the appliance and check that the food is cooked properly.

A. If it's not ready, simply put the basket back in the unit and set the timer to a few extra minutes.

B. If food is cooked, pour the ingredients into a heat-resistant dish.

Tip: To remove bulky or fragile ingredients, lift them from the basket with a flat spatula or a pair of kitchen tongs.

COOKING GUIDE

The table below is used to select the basic settings for the most common foods.

Note : These parameters are only indications. Foods differ in size, shape, brand, and origin, sometimes it's better to rely on your own experience.

We cannot guarantee the best setting for your ingredients.

Type of food	Frying temperature (°c)
Pre-fry chips	170
Final fry chips	190
Fondue parmesan	170
Cheese croquettes	170
Meat/fish/potato croquettes	190
Fish	170
Fish sticks	180
Cheese fritters	180
Doughnuts	190
Meat croquettes	190
Chicken	160
Scampi fritters	180

CLEANING AND MAINTENANCE

- Before cleaning, always switch off the appliance, disconnect the apparatus and let it cool.
- Wait until the fryer is completely cool before starting cleaning.

Note: It is important to wait one to two hours after use to avoid any risk of burns.

Remove remaining residues with paper towels before cleaning the device.

- Never plunge the apparatus or the control board in water or all other liquid!
- Clean the outside of the apparatus with a sponge or slightly wet linen.

- The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.
- Do not use abrasive cleaners, gritting, or metal brush or another cutting object.
- Clean the inside of the appliance with hot water and a non-abrasive sponge.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase, by the consumer.

The documents in proof of guarantee are:

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay!

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	230V~ 50/60Hz
Power	3000W
Norm	Class I
Capacity	5.0 L

 
Made in P.R.C

The characteristics can change without prior notice

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note: In the event of question concerning the earth or electric connection, please consult some qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

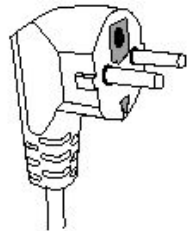

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-Bois – France**

