

Techwood®

POSITIVE TECHNOLOGY

TRAVEL STEAM IRON

INSTRUCTION MANUAL



IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the

appliance in a safe way and understand the hazards involved.

- Cleaning and maintenance must not be made by children without supervision.
- keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- This device is not a toy, do not leave small children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person(*) in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- The iron must not be left unattended while it is connected to the supply mains.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- The filling aperture must not be opened during use.
- when placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

- ❑ The iron must be used and rested on a flat and stable surface.
- ❑ When the iron is put back on its stand, make sure that the surface that supports the iron-rest is stable.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE

approved extension leads. Input power must be at least 16A, 250V, 3000W.

- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.

(*) Competent qualified person: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs

SPECIFIC WARNING FOR IRONS

 
- Before placing the iron on its stand, Always place the iron stand on a flat, stable surface.
- Always unplug the iron before filling
- After use, unplug the iron and place it on its stand on a flat surface.
- The iron must not be left unattended when it is connected to the main power.

WARNING: BURN HAZARD.

- During operation, the temperature of the appliance surface may be hot.
- The heating parts remain hot, long time after stopping the machine.
- The symbol "Hot Surface" warns the user that the apparatus walls may become hot, and to take precautions.




GENERAL INFORMATION

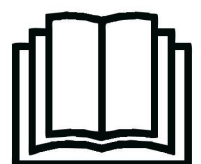


The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

 The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.

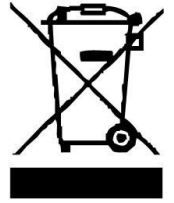

 The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

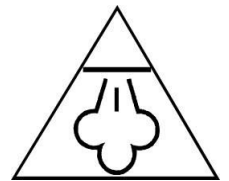

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



 
The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

DESCRIPTION

1. Steam express knob
2. Release Handle lock button
3. Comfort handle
4. Water filling aperture
5. Water tank button
6. Thermostat selector
7. Stand for locked handle
8. Non coating soleplate

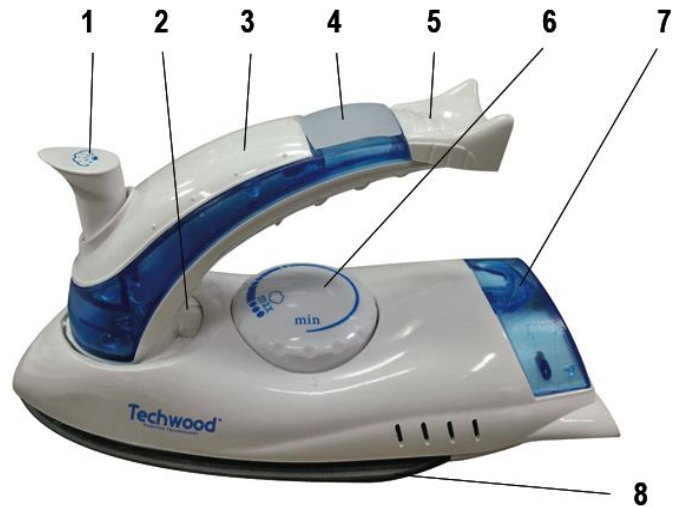

General description

Warning: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fibre.

Fabric	Temperature control	Ironing methods
Synthetic fibres nylon	.	Iron the reverse side. Do not use the spray function, as spraying could cause stains.
Silk wool	..	Iron the reverse side to prevent shiny spots.
Cotton linen	...	You'd better set the iron to a steam position.

Before the first use

Please, Test the iron on clean cloth.

During this operation a light smoke can escape the sole or iron for a few moments; This is normal.

During ironing, the thermostat switches automatically at regular intervals to maintain a constant temperature.

It is always easier to iron fabrics on slightly damp clothes.

 
USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Stand the appliance on a table or flat & stable surface.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- Never modify the appliance in anyway.
- To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- When the iron is returned to its iron rest, make sure that the surface that supports the iron rest is stable.
- The iron must be used and rested on a stable surface.
- Fill the tank (up to the maximum level) before connecting.
- Select the desired temperature (see above table), the iron gets hot.
- When the desired temperature is reached, the iron is ready for use.
- After use, set the thermostat and unplug the iron.


Filling with water

To fill the tank :

Press the button under the iron handle to unfold.
The handle will lift automatically.

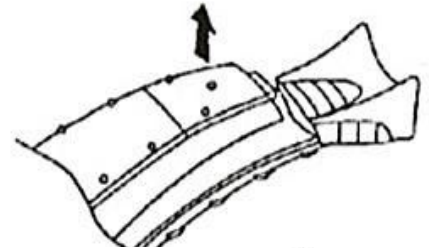

 Detach the tank by pulling the handle backwards by the button of the tank.

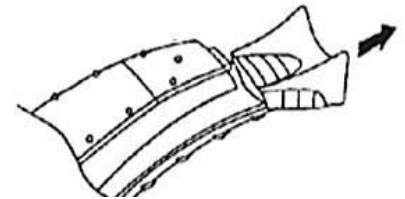

Open the tank and fill with clean water.

Replace the tank and secure it using the button on the tank.

(Do not exceed the maximum level).



Shot of steam

Set the thermostat to max. wait until the iron heats up sufficiently.
Place the iron over the ironed fabric and firmly press the button to release steam.
It may be useful to press repeatedly for increased efficiency.

CLEANING AND MAINTENANCE

Before cleaning switch off the appliance

Always disconnect the apparatus and to let it cool before cleaning.

Any deposits, starch residue or size left on the plate can be removed using a damp cloth or an un-abrasive liquid detergent.

Avoid scratching the plate with steel wool or metallic objects.

The plastic parts can be cleaned with a damp cloth then wiped over with a dry cloth.

Never plunge the apparatus in water or all other liquid !

CAUTION : The ceramic sole you will use will have a long life if you take care of it.

Do not scratch or damage it with metal objects.

STORAGE

- Disconnect the plug of the iron from the socket.
- Ensure the unit is completely cool and dry.
- Empty the reservoir.
- Do not wrap the cord around the appliance, as this will cause damage.
- Always put the iron away in a vertical position.
- Keep the appliance in a cool, dry place.

LEGAL GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. In accordance with the duration of the legal guarantee of conformity, this device is guaranteed 24 months from the date of purchase by the consumer.

The proof of warranty is the purchase invoice.

Without this proof, no free replacement or free repair can be made.

During the period of the legal guarantee of conformity, we take, free of charge, the defects of the device or the accessories, resulting from a defect of materials or manufacturing by repair or replacement.

However, these services, within the framework of the legal guarantee of conformity, do not entail any extension of the duration of guarantee and gives no right to a new guarantee !

In case of recourse to the guarantee, bring back the complete apparatus to your retailer,

in its original packaging, accompanied by proof of purchase.

Defects in accessories, wear parts, glass or plastic parts resulting from breakage or misuse remain the responsibility of the consumer. In this case, cleaning, maintenance or replacement would not be guaranteed and would therefore be paid !

In case of foreign intervention, the warranty becomes void.

After expiration of the warranty period, repairs may be made, against payment, by the specialized trade or a repair service.

SPECIFICATIONS

Power supply	230V~ 50Hz
Power	1000W
Norm	Class I

 
Made in PRC

The characteristics can change without preliminary preventing

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note : In the event of question concerning the earth or electric connection, please consult qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

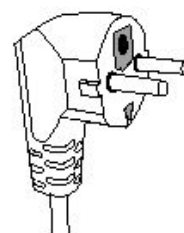

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°C111 à 115
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous bois - France**