

STEAM IRON

INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.



IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if

they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Cleaning and maintenance must not be made by children without supervision.
- Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- This device is not a toy, do not leave children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person(*) in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- The iron must not be left unattended while it is connected to the supply mains.
- The plug must be removed from the socket-outlet before the water reservoir is filled with water.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- The filling aperture must not be opened during use.

- ❑ When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- ❑ The iron must be used and rested on a flat and stable surface.
- ❑ When the iron is put back on its stand, make sure that the surface that supports the iron-rest is stable.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.

- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.

(*) Competent qualified person: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs

SPECIFIC WARNING FOR IRONS

- Before placing the iron on its stand, always place the iron stand on a flat, stable surface.
- Always unplug the iron before filling
- After use, unplug the iron and place it on its stand on a flat surface.
- The iron must not be left unattended when it is connected to the main power.

WARNING: BURN HAZARD.

- During operation, the temperature of the appliance surface may be hot.
- The heating parts remain hot, long time after stopping the machine.



- The symbol "Hot Surface" warns the user that the apparatus walls may become hot, and to take precautions.

GENERAL INFORMATION

 
The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

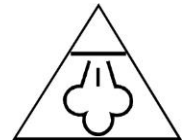

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of



the weight of homogeneous material, and 0.01% for the 6th • cadmium.

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



 
For more information : <http://www.quefairedemesdechets.fr>

CLEANING AND MAINTENANCE

- Always unplug the unit and allow it to cool before cleaning.
- All deposits, starch residues or dimensions left on the plate can be removed with a damp cloth or a non-abrasive liquid detergent.
- Clean the outside of the appliance with a sponge or slightly damp cloth.
- Never immerse the appliance in water or any other liquid!
- Never use abrasive products, wire brush or other sharp objects.
- Do not lay the iron on rough or metal surfaces to avoid scratches.
- Store the iron vertically in a dry and ventilated place.
- The sole of the iron will have a long life if you take care of it. Do not scratch or damage it with metal objects.

DESCRIPTION

1. Spray nozzle
2. Tank cover
3. Steam power setting
4. Express steam
5. Spray
6. Temperature setting
7. Comfort handle
8. Heating indicator light
9. Water tank
10. Orientable electrical connector
11. Stainless steel soleplate

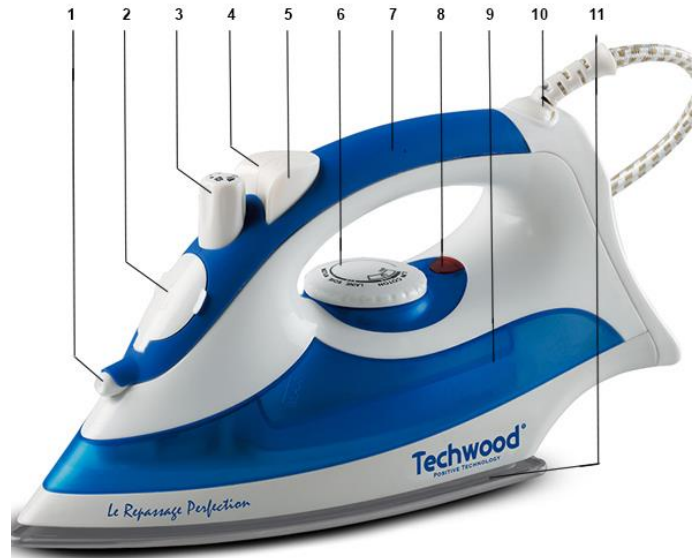

General description

1. Textile which has been applied (gloss, crinkle, relief etc.) is best ironed at lower temperature.
2. Sort the laundry according to ironing temperature: put wool with wool, cotton with cotton, etc. The iron heats up more quickly than it cool down. Therefore, start ironing articles that need to be ironed at lowest temperature, such as those made of synthetic fibre.
3. Temperature guide

Follow the ironing instructions on the garment label. If these is no instructions but you do know the kind of fabric, please consult the table.

Warning: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fibre.

Fabric	Temperature control	Ironing methods
Synthetic fibres nylon	.	Iron the reverse side. Do not use the spray function, as spraying could cause stains.
Silk wool	..	Iron the reverse side to prevent shiny spots.
Cotton linen	...	You'd better set the iron to a steam position.

FILLING THE WATER TANK

1. Set the steam control to the closed position.
2. Hold the iron vertically by the handle and tilt it 10° to fill it. Run the water through the filling inlet.

Notes : Never exceed the "Max" level indicated on the tank.

Never use scented substances.

3. If water has leaked out of the tank, Clean the outside of the tank.
4. After ironing, always empty the water tank.
5. The tap water is usable. However, if the water in your area is very hard, it is advisable to use distilled water.

BEFORE FIRST USE

Fill the tank with water before connecting it. (without exceeding the maximum level).

Plug the iron into an outlet in good condition.

Selecting the temperature • • The indicator light comes on, indicating that the iron is starting to heat up.

When the desired temperature is reached, the indicator goes off and the iron is ready for use.

For this first use, test clean cloth or used cloth.

First, let the steam come out for at least 1 minute and press the express steam button and the spray button several times, to clean the tank of any manufacturing impurities.

Notes: During this operation a slight smoke may be released from the hearth or iron for a few moments; This is normal.

During ironing, it is normal for the indicator light (Means the thermostat) to turn on and off automatically to maintain a constant temperature.

It is always easier to iron fabrics or slightly damp clothes.

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are, corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.

- Stand the appliance on a table or flat & stable surface.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- Never modify the appliance in anyway.
- To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- When the iron is returned to its iron rest, make sure that the surface that supports the iron rest is stable.
- The iron must be used and rested on a stable surface.

TEMPERATURE ADJUSTMENT

- Low temperature for fabrics - Acrylic- Nylon - Polyester - Rayon - Synthetic
- Average Temperature for Wool - Silk
- High temperature for Cotton - Linen

Spraying

Regardless of the temperature used, by pressing the spray button several times, the laundry can be softened and wet for easy ironing. Always make sure there is enough water in the tank.

Shot of steam

By press powerful steam button, an intense shot of steam is emitted from the soleplate. This can be very useful e.g. when removing stubborn creases.

Notes : The shot of steam facility can be used only while ironing with middle or high ironing temperature.

By pressing the shot of steam, Powerful steam can also be applied when holding the iron in a vertical position. This is useful for removing creases from hanging clothes, curtains, etc.

Steam-ironing

Steam-ironing is only possible at higher ironing temperatures ;

•• for moderate steam, ••• for maximum steam.

Set the steam controller when the thermostat is specifically set to Steam mode.

Steam is produced as soon as the iron is in a horizontal position.

The production of steam is interrupted as soon as the iron is kept in a vertical position.

NOTE : When using in steam mode, if drops of water bead the soleplate, increase the temperature by turning the thermostat knob clockwise.

DRY IRONING

Set the steam flow controller to 0.

As for the steam mode, select the temperature according to the nature of the fabric. When the desired temperature is reached, the indicator goes off and the iron is ready for use.

ADVICE FOR GOOD IRONING

We recommend using the lowest temperatures with fabrics that have unusual finishes (sequins, embroidery, flush, etc.).

If the fabric is mixed (e.g. 40% cotton 60% synthetics), set the thermostat to the temperature of the fibre requiring the lower temperature.

If you don't know the composition of the fabric, determine the suitable temperature by testing on a hidden corner of the garment. Start with a low temperature and increase it gradually until it reaches the ideal temperature.

Never iron areas with traces of perspiration or other marks: the heat of the plate fixes the stains on the fabric, making them irremovable.

To avoid marking silk, woollen or synthetic garments shiny, iron them inside out.

To avoid marking velvet garments shiny, iron in one direction (following the fibre) and do not press down on the iron.

The heavier the washing machine is loaded, the more garments come out creased.

This also happens when the spin drying revolutions are very high.

Many fabrics are easier to iron if they are not completely dry.

For example, silk should always be ironed damp.

STORAGE

- Ensure the unit is completely cool and dry.
- Empty the reservoir by turning the iron upside down and gently shaking it.
- Do not wrap the cord around the appliance, as this will cause damage.
- Always put the iron away in a vertical position.
- Keep the appliance in a cool, dry place out of reach of children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control.

This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are:

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted.

Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay!

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	220-240V~ 50/60Hz
Power	1600-2000W
Norm	Class I

 
Made In P.R.C

The characteristics can change without prior notice.

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note: In the event of question concerning the earth or electric connection, please consult qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

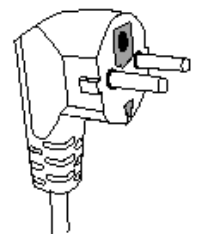

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois - France**