

ELECTRIC WINE OPENNER

Instruction manual



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.



IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:

- staff kitchen
- environmental
- By client
- environmental
- Environmental

Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.


- Farm Houses • Bed and Breakfast.

- Only use the appliance in the way indicated in these instructions.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.

- This device is not a toy, do not leave small children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Make sure the appliance has cooled down before cleaning and storing it.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.
- The item is not to be used, if it has been dropped or if there are visible signs of damage.
- This appliance is only intended for household use.
- Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

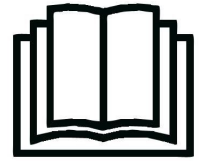

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.




The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "III" means that the equipment concerned is designed to be supplied at a voltage of not more than 50 volts AC or 120 volts DC. Materials with this sign are classified as Class III.

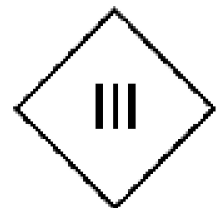

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

IMPORTANT WARNINGS SPECIFIC TO THIS DEVICE

Never force the mechanism or prevent it from working.
Do not touch the sharp spiral (risk of injury)
Only hold the corkscrew by the plastic body.

TO KNOW ITS UNIT

1. Capsule Cutter
2. Button to remove the cork from the bottle
3. Button for removing the cap from the corkscrew



USE

Insert 4 x 1.5V Alkaline LR6 or AA batteries into the battery compartment on the back of the unit. Respect the polarity.

To open a bottle of wine :

1. Use the capsule-cutter by placing it on the neck of the bottle neck and rotating left / right to cut the tin or plastic covering the neck. Remove the cut part



2. Place the electric corkscrew on the neck of the bottle. Press on the button (2) while holding the corkscrew on the bottle. Caution : If the corkscrew is not maintained in position, on the bottle ; the cork will may not go out properly during the operation.



The cap comes out automatically and easily from the bottle.

When the mechanism stops, the cap is removed from the bottle and Remains in the corkscrew.

3. To release the cap, press on the button (3). The cap pops out automatically, without being damaged.

Note: Some plastic or synthetic plugs may not come out properly because of their size or material. In this case, Finish removing the cap manually.



CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance.

Clean the outside of the apparatus with a sponge or slightly wet linen.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

STORAGE

-Ensure the unit is completely cool and dry.

-Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control.

This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
 - The filled and stamped warrantee plate (located on side or bottom of the gift box).
- Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee !

In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

