

HAND MIXER + STICK BLENDER + CHOPPER 4 IN 1

INSTRUCTION MANUAL



Dear consumer,
Please, read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling, or cleaning.
- This appliance shall not be used by children.

- Keep the appliance and its cord out of reach of children.
- Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with appliance
- Cleaning and maintenance must not be made by children.
- This device is not a toy, do not leave small children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons(*) in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- Never use any other connector than the one provided.

- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.

(*) Competent qualified person: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

SPECIAL WARNING FOR MIXER & STICK BLENDER

- Never touch any of the accessories of the device while it is still moving. Always wait for him to stop.
- Always unplug the power cable from the mains if it is left unattended and before any cleaning, maintenance and accessory installation.
- Stop the unit and disconnect it from the power supply before changing accessories or approaching moving parts during operation.
- Potential injury may occur during misuse. Care must be taken when handling sharp blades, emptying the bowl and during cleaning as they are extremely sharp.
- For instructions on cleaning surfaces in contact with food or oil, please refer to the "cleaning and maintenance" paragraph in the manual.
- For instructions on use of accessories, operating time and speed settings, refer to the paragraphs below.
- During operation, no utensils such as spoons, scrapers or your hands should be near the rotating whips or kneaders. Risk of serious injury !
- To avoid splashing, immerse the whisks completely in the food before switching on the appliance.
- Mix only food products with this appliance.
- Do not operate the mixer for a long time continuously. The engine could overheat.
- After 3 minutes of continuous use, allow the unit to rest at least 5 minutes before next use. Except for chopper and Mixing foot see part **PRODUCT AND PREPARATION (OPERTING TIME AND REST TIME)**

CLEANING AND MAINTENANCE

Before cleaning switch off the appliance, always disconnect the apparatus and to let it cool before cleaning.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like whisk, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid!

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

Don't touch the sharp blades.

 
Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender shaft is thoroughly sterilized. Use a sterilizing solution in accordance with the sterilizing solution manufactures instructions.

Some foods, eg. carrot, may discolour the plastic. Rubbing with a cloth dipped in vegetable oil helps remove discolouring.

ATTENTION: blades are very sharp, handle with care.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

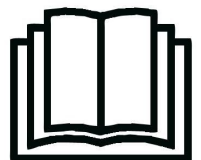

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



 
The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.




The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

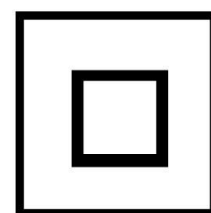

 The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.

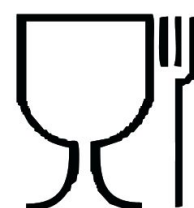

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

TO KNOW ITS UNIT

1. Ejection button
2. Gear selector & button
3. Ergonomic handle
4. Housing
5. Mixing foot
6. Chopper bowl
7. Blade
8. Dough Beater
9. Kneading whips
10. Chopper lid with arm for blade
11. Connection for the stick blender



IMPLEMENTATION

When setting up, always make sure that the appliance is unplugged from the mains.

Before using for the first time, remove the appliance and all accessories gently and paying attention to sharp accessories. Clean all accessories with soapy water, rinse and dry thoroughly.

Clean the outside of the appliance with a damp sponge or cloth and wipe clean.

ATTACHING ACCESSORIES TO PETRI OR FOUETTER

Press the two whips or kneaders by pressing lightly into the bottom of the base until you hear the click.

Attention: The whip carrying a ring must be introduced into the opening of the mixer near which is drawn a big round !

To eject the accessories, press the "Eject" button (1).

FIXING MIXER FOOT

Make sure the whips or kneaders have been ejected from the base. Otherwise, press the eject button to do so. (See previous paragraph)

Open the connector cover on the back of the unit.

Connect the foot into its space.

Notes : The foot snaps in counter-clockwise. Disassemble by turning in the other direction.

The device cannot work with the whips and the foot, to open the foot connection hatch, whips or kneaders must be ejected from the device.

The stick blender is perfect for preparing soup, sauce, baby food and any mix and milkshakes.

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are, corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Stand the appliance on a table or flat surface.
- Never modify the appliance in anyway.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.

CHOPPING

1. Attach the blade on to the blade support in the jar and pour in the food to be chopped. You can chop meat, cheese, onions, herbs, garlic, carrots, almonds, prunes etc..
2. Fix the chopper cover on the chopper bowl; place the motor unit onto the chopper cover by opening the cover of the mounting hole. Rotate the motor unit to fix completely. **ATTENTION:** make sure the motor unit is fixed to the bottom of the connector on the chopper cover.
3. Plug in. Press and hold the speed button to start working. During operation, hold the motor unit with one hand and use the other to hold the chopper bowl.
4. After use, unplug the appliance and take the motor unit from the chopper. Open the cover and take out the blade carefully. **Caution: Blade is every sharp, handle with care.**
5. Remove the processed food from the chopper bowl.

Caution: For food like meat (quantity should be under 350g), do not operate the appliance more than 30 seconds for each time. For food like vegetables and fruit (do not exceed the “max” level on the bowl), do not operate the appliance more than 60 seconds for each time.

Choose, depending on use, the accessory and the operating time adapted according to the part **PRODUCT AND PREPARATION (OPERATING TIME AND REST TIME)**

STICK BLENDER

1. Immerse the mixing foot in the ingredients to be mixed.
2. Press the speed selector to start the unit.
Note : More pressure on the button increases the speed.
3. Move the device a little up and down & in a circular fashion.
4. Always stop the appliance before taking the foot of mixer out of the container.

Notes : Mixing directly in a saucepan while cooking, be careful not to damage the mixer or the inside of the pan.

To rinse the blender foot, detach it from the base to prevent wet the engine block.

Never mix liquids at temperatures above 80 ° C.

Choose, depending on use, the accessory and the operating time adapted according to the part **PRODUCT AND PREPARATION (OPERATING TIME AND REST TIME)**

HAND MIXER

1. Insert whisks or dough hooks into the holes under the engine block.

Note: Make sure they are correctly locked.

2. Connect the device.

3. Place the ingredients in a suitable container.

4. Place whips (or dough hooks) in the container and press the speed selector. The unit will start working.

Note : More pressure on the key increases the speed.

5. Hold down the key for the duration of the operation. When the desired result is obtained, release the speed selector to stop the unit.

6. After use, unplug the unit.

7. Press the eject button (1) to remove the whips (or dough hooks).

Choose, depending on use, the accessory and the operating time adapted according to the part **PRODUCT AND PREPARATION (OPERATING TIME AND REST TIME)**

PRODUCT AND PREPARATION (OPERATING TIME AND REST TIME)

Product and Preparation	Max Amount	Accessories	Operating Time (Max)	Rest time
Waffle batter Cookie dough Pancake dough Cake dough	750 gr.	Dough beater	3 min.	5 min.
Dressings, mayonnaise, dessert	750 gr.	Whisk	3 min.	5 min.
Sauces, creams and soups	750 gr.	Whisk	3 min.	5 min.
Whipped cream	750 gr.	Whisk	3 min.	5 min.
Beat the egg whites	5 egg whites	Whisk	3 min.	5 min.
Mashed potatoes	750 gr.	Mixing foot	1 min.	3 min.

Cheese, onion, herbs, basil, carrots, almonds, prunes, etc.	Do not exceed Max. level on the bowl	Chopper	60 secondes	5 min.
Meat	> 350gr.	Chopper	30 secondes	5 Min.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are:

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay!

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	220-240V~ 50/60Hz
Power	300W
Norm	Class II

The characteristics can change without prior notice.

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-Bois - France**