

MICROWAVES OVEN - GRILL

Instruction manual



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - By clients in hotels, motels and other residential type environments;
 - **Environment type like : • Farm Houses • Bed and Breakfast.**
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the

appliance in a safe way and understand the hazards involved.

- This device is not a toy, do not leave small children or people with disabilities to play with.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years of age when it is energized or cooling down.
- This device is not a toy, do not leave small children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.

- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.

- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.
- This appliance is only intended for household use.

(*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

IMPORTANT SAFETY INSTRUCTIONS

If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person. It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

Liquids and other foods must not be heated in hermetically sealed containers due to the risk of explosion.

Only use utensils that are suitable for use in microwave ovens. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition

If smoke is emitted, stop or unplug the oven and keep the door closed to extinguish potential flames

Heating drinks with a microwave can cause abrupt and delayed spurting of boiling liquids. Precautions must also be taken when handling the container.

 
The contents of baby feeding bottles and food containers must be stirred or shaken and the temperature must be checked prior to consumption. In order to avoid burns.

It is not advised to heat eggs in their shells nor hard-boiled eggs in a microwave. Due to the risk of explosion. Even after cooking is complete

It is advised to clean the oven regularly and to remove all food deposits: if the appliance is not kept sufficiently clean. Its surface could degrade. Which could inexorably affect appliance life span and lead to a hazard.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

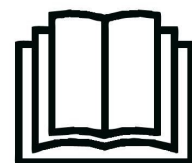

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "HOT WALL" warns the user that the walls of the unit can become very hot, and to take precautions as required.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly. Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never modify the appliance in anyway.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the Door (bent), Hinges and latches (broken or loosened), Door seals and sealing surfaces.

- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

INSTALLATION

Make sure that all the packing materials are removed from the inside of the door.

WARNING: Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.

This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.

Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.

1. For correct operation, the oven must have sufficient airflow. Allow 30cm of space above the oven, 20cm at back and 5cm at both sides.
2. Do not cover or block any openings on the appliance.
3. Do not remove feet.
4. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
5. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
6. The socket must be readily accessible so that it can be easily unplugged in an emergency.
7. Do not use the oven outdoors.

PART NAMES

1. Control panel : Power & Timer
2. Drive shaft of the plate
3. Rolling collar
4. Glass tray
5. Oven glass door
6. Security locking system

Installation

1. Cabinet : Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

- Select a level surface that provide enough open space for the intake and/or outlet vents.

- Blocking the intake and/or outlet openings can damage the oven.
- Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING : Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service centre.

Operation Instructions

1. Clock Setting

When the microwave oven is connected, the LED will display "0:00", buzzer will ring once.

- 1) Press " Horloge/minuteur " once to select clock function, the hour figures will flash.
- 2) Turn " the round knob " to adjust the hour figures, the input time should be within 0--23.
- 3) Press " Horloge/minuteur ", the minute figures will flash.
- 3) Turn " the round knob " to adjust the minute figures, the input time should be within 0--59.
- 4) Press " Horloge/minuteur " to finish clock setting. " Display " will flash, and the time will light.

Note: 1) If the clock is not set, it would not function when powered.
2) During the process of clock setting, if you press " ", the oven will go back to the previous status automatically.

2. Microwave Cooking

Press " Micro-ondes " the LED will display "P100". Press " Micro-ondes " for times or turn " the round knob " to choose the power you want, "P100", "P80", "P50", "P30", or "P10" will display for each added press. Then press " Départ " to confirm, and turn " the round knob " to set cooking time from 0:05 sec. to 95:00. Min.

Press " Départ " again to start cooking.

Note: the step quantities for the adjustment time of the coding switch are as follow :

De	0 à 1 min :	5 seconds
	1 à 5 min :	10 seconds
	5 à 10 min :	30 seconds
	10 à 30 min :	1 minute
	30 à 95 min :	5 minutes

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as the following steps :

- 1) Press " Micro-ondes " once, the screen display "P100".
- 2) Press " Micro-ondes " once again or turn " the round knob " to choose 80% microwave power.
- 3) Press " Départ " to confirm, and the screen displays "P 80".
Turn " the round knob " to adjust the cooking time until the oven displays

"20:00".

1) Press " Départ " to start cooking .

"Microwave" Power

Order	Display	Power
1	P100	100%
2	P80	80%
3	P50	50%
4	P30	30%
5	P10	10%

3. Grill or Combi. Cooking

Press " Grill / Combi " the LED will display "G",and press " Grill / Combi " for times or

turn the round knob to choose the power you want, and "G", "C-1" or "C-2" will display

for each added press.

Then press " Départ "to confirm, and turn the round knob to set cooking time from 0:05 to 95:00. Press " Départ " again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power(C-1) to cook for

10 minutes, you can operate the oven as the following steps.

1) Press " Grill / Combi " once, the screen display "G".

3) Press " Départ " to confirm, and the screen displays "C-1".

4) Turn " the round knob " to adjust the cooking time until the oven displays "10:00".

5) Press " Départ " to start cooking .

"Grill/Combi." Pad instructions

Order	Display	Microwave Power	Grill Power
1	G	0%	100%
2	C-1	55%	45%
3	C-2	36%	64%

Note : at half the grill time passes, the oven sounds twice, and this is normal. In order to have a better effect of grilling food, you should turn the food over, After doing, close the door, and press " **Départ** " to continue cooking. If no operation, the oven will restart working automatically.

4. **Quick Start**

- 1) In waiting state, Press " **Départ** " to start cooking with 100% power, each added press will increase 30 seconds cooking time up to 95 minutes.
- 2) In microwave cooking or time defrost state, each press of " **Départ** " will increase 30 seconds of cooking time.
- 3) In waiting state, turn left the round knob to set cooking time with 100% power. then press " **Départ** " to start cooking

5. **Defrost By Weight**

- 1) Press " **Décongélation au poids** " once, and the oven will display "dEF1".
- 2) Turn " the round knob " to select the weight of food from 100 to 2000 g.
- 3) Press " **Départ** " to start defrosting.

6. **Defrost By Time**

- 1) Press " **Décongélation au temps** " once, and the oven will display "dEF2".
 - 2) Turn " the round knob " to select the defrost time. The MAX time is 95 minutes.
 - 3) Press " **Départ** " to start defrosting.
- The defrost power is P30, and it will not be changed

8. **Kitchen Timer**

- (1) Press " **Horloge/minuteur** " twice, LED will display 00:00, clock indicator will light.
 - (2) Turn " the round knob " to enter the desired time.(The maximum cooking time is 95 minutes.)
 - (3) Press " **Départ** " to confirm setting, timer indicator will light and time will count down.
 - (4) When the kitchen time is over, timer shows 0. The indicator will go out & The buzzer will ring 5 times.
- If the clock was set (24-hour system) first, LED will display the current time.
- Note : The kitchen Time differ from - 24-hour system- Kitchen Timer is a timer.

9. Auto Menu

1) Turn right " the round knob " to choose the menu, and "A-1" to "A-8" will display, which

means : pizza, meat, vegetable, pasta, potato, fish, beverage and popcorn.

2) Press " Départ " to confirm.

3) Turn " the round knob " to choose the pre-programed weight as the menu chart (below).

4) Press " Départ " to start cooking.

Example: If you want to use "Auto Menu" to cook fish for 350g.

1) Turn " the round knob " clockwise till "A-6" display.

2) Press " Départ " to confirm.

3) Turn " the round knob " to select the weight of fish till "350" display.

4) Press " Départ " to start cooking.

The menu chart

	Menu	Weight	Display
Pizza	A-1	200g	200
		400g	400
Viande (Meat)	A-2	250g	250
		350g	350
		450g	450
Légumes (Vegetable)	A-3	200g	200
		300g	300
		400g	400
Pâtes (Pasta)	A-4	50g (avec 450ml d'eau)	50
		100g (avec 800ml d'eau)	100
Pomme de terre (Potato)	A-5	200g	200
		400g	400
		600g	600
Poisson (Fish)	A-6	250g	250
		350g	350
		450g	450
Boisson (Beverage)	A-7	1 cup (120ml)	1
		2 cups (240ml)	2
		3 cups (360ml)	3

Popcorn	A-8	50g	50
		100g	100

10. Multi-section cooking

At most 2 sections can be set for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.

Example: If you want to defrost food for 5 minutes and then cook with 80% microwave

power for 7 minutes, operate it as the following :


- 1) Press " Décongélation au temps " once, and the oven will display "dEF2".
- 2) Turn " the round knob " to select the defrost time till "5:00" display.
- 3) Press once on " Micro-ondes " button, the screen display "P100".
- 5) Press " Départ " to confirm, and the screen displays "P 80".
- 6) Turn " the round knob " to adjust the cooking time till the oven displays "7:00".
- 4) Press " Départ " once again or turn " the round knob " to choose 80% microwave power.
- 7) Press " Départ " to start cooking, and buzzer will sound once for the first section, defrosting time counts down ; buzzer will sound once again entering the second cooking. when cooking is finished, buzzer sounds five times.

11. Inquiring Function

(1) In states of microwave, grill and combination cooking, press " Micro-ondes", the current power will be displayed for 3 seconds. After 3 seconds, the oven will turn back to the former state;

(2) In cooking state, press " horloge/minuteur " to inquire the time and the time will display for 3 seconds.

11. Lock-out Function for Children

Lock: In waiting state, press " stop/annulation " for 3 seconds, there will be a long beep denoting entering the children-lock state and current time will display (if the time has been set,) otherwise, the LED will display "  ".

Lock quitting : In locked state, press " stop/annulation " for 3 seconds, there will be a long "beep" denoting that the lock is released.

CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
10. Remove odours from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
12. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous.
13. Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal centre provided by the municipalities

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.

When there is interference, it may be reduced or eliminated by taking the following measures:

Clean door and sealing surface of the oven.

Reorient the receiving antenna of radio or television.

Relocate the microwave oven with respect to the receiver.

Move the microwave oven away from the receiver.

Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

MICROWAVE COOKING PRINCIPLES

Arrange food carefully. Place thickest areas towards outside of dish.

Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.

Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.

Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.

Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the centre of the dish to the outside.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING Improper use of the grounding plug can result in a risk of electric shock.

Note: If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.

BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
Check to ensure that the control panel is programmed correctly and the timer is set.
Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 12 months starting from the date of purchase. The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void. After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

UTENSILS GUIDE

The ideal material for a microwave utensil is transparent to microwave, it allows energy to pass through the container and heat the food.

Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.

Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.

Round /oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.

Narrow strips of aluminium foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.

COOKWARE	MICROWAVE
Heat-Resistant Glass	Yes
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper	Yes
Metal Tray	No
Metal Rack	No
Non Heat-Resistant Glass	No
Aluminium Foil & Foil Containers	No

SPECIFICATIONS

Power supply	230V~ 50Hz
Input Power	1450W
Output power	900W micro-waves / 1000W Grill
Norm	Class I
Frequency	2450MHz
Capacity	25 Litres
Cooking system	rotate tray
Weight	Approximately 15kg

Made in P.R.C

The characteristics can change without preliminary preventing

Disconnect the electrical mains supply cable before any maintenance, cleaning operation and installation of accessories.

The device should not be exposed to moisture or rain.

 
This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note : In the event of question concerning the earth or electric connection, please consult a qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

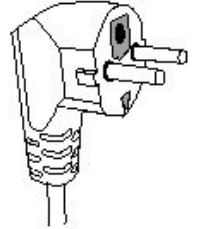

Always unplug the appliance before any cleaning or maintenance operation and accessories assembly.

CAUTION: If the electric cable is damaged, it must be replaced by the manufacturer, his after-sales service or people with similar qualification, in order to avoid any danger. In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

**Imported by Sotech International
" LE PERIPOLE " N°C111 à 115
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous bois - France**