

ELECTRONIC KITCHEN SCALE

INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - By clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- This device is not a toy, do not leave small children or people with disabilities to play with.
- Cleaning and maintenance must not be made by children without supervision.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This device, designed for home use, complies with standards relating to this type of product.
- The appliance must be used and rested on a table or flat & stable surface.
- The item is not to be used, if it has been dropped or if there are visible signs of damage.
- Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.
- This appliance is only intended for household use.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

KNOW YOUR DEVICE



1. Weighing area
2. Setting & and functions button
3. LCD screen



This button has several functions

1. **By pressing** the button

M = On + T = Tare. Switch on and Tare function.

Note : This button is also used to turn off the device.

2. **By turning** the button

The first 5 positions are used to weigh and add (at most) 5 ingredients in the same weighing.

Position 1 Weigh the First Ingredient

Turn to position 2 and weigh the second ingredient ... and so on, up to position 5.

Note : each position from 1 to 5 can also weigh an ingredient separately.
The "Total" position is used to display the total of the weights added in the 5 previous positions.

This same position is also "Unit", used to change the unit : Gram (g) / Pound (lb) / Liquid ounce (fl) / Milk (Milk mode) / Water (Water mode).

To do this : without weighing, position the button on "Unit", when the screen displays 0 press the button to change the unit.

SYMBOLS ON THE SCREEN



1. "T" = Tare
2. "0" (no weight on the scale or tare performed)
3. "-" Negative value
4. "" = Weighing in progress
5. "lb" = Pound Unit
6. "fl" = Liquid ounce
7. "ml" = Millilitre
8. "g" = Gram

BEFORE FIRST USE

Open the battery compartment (under the device).
Install 2 x 1.5V LR3 or AAA batteries (not supplied) in the compartment.
Make sure of the direction of polarity.
Replace the cover.

To replace the batteries, remove the cover and remove the old batteries.
Insert 2 new 1.5v LR3 or AAA batteries.

Note : The symbol "LO" = battery Low, appears on the screen, when the batteries must be replaced.

USE

Press the "M" button to turn on the scale.

To stop the scale press and hold button "M" for three seconds.

Note : To save battery life, the scale switches off automatically if it is not used for two minutes.

The default unit is grams. To change the unit, position the button on "UNIT" and press the button.

Note : Each time you press, the unit changes to every unit & back to the gram.

To tare a container on the scale, place the container and press "TARE". => The device will reset to zero taking into account the weight of the container.

Notes : By pressing "Tare", the weight of the container will have no impact on the total weight of the measure, but it will be taken into account in the capacity of the scale.

Each time you press TARE, the weight will return to 0. It will be possible to weigh several ingredients, in a row, in the same bowl and for the same weighing.

It is also possible, with this scale, to weigh and add the weight of 5 ingredients. (See the paragraph: Knowing your device).

The scale can accurately measure when the weight is less than 8000g. If the weight exceeds the capacity of the scale, the LCD will display "Err" = overload.

CLEANING AND MAINTENANCE

- Clean the exterior of the appliance with a slightly damp sponge or cloth or with a little alcohol or glass cleaner.
- Parts in contact with food such as : Bowl (removable), Fork, Spatula etc. should be cleaned in hot water with a sponge and dish soap or washed in the dishwasher.
- This scale is not waterproof. Do not expose it to moisture. Never immerse it in water or any other liquid!
- Do not use soap or other chemicals.
- Never use abrasive products, a wire brush or other sharp object.
- Keep the scale away from water, corrosive liquids, heat and extreme cold.
- The scale must not be manhandled as this may will damage or disturb the high precision weight sensor.
- The scale is for private use and is not suitable for commercial use.
- If the scale does not work well, change the batteries.
- Make sure that the scale is at room temperature, and on a stable horizontal surface without vibrations.
- Store the scale in a clean, dry place. Dust, dirt and moisture can build up on electronic sensors and can deteriorate the weighing.

- Place carefully the items to be weighed. Do not drop items on the scale.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase of consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee !

In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Capacity	: 152g / 8000g
Graduation	: 1g
Tare function	: Automatic
Stop	: Automatic
Indicators	: Lo Battery and overweight
Units of measurement	: Grams (g), Pound (lb), Liquid pound (fl), Milk, Water
Power supply	: 2 x 1,5V LR03 ou AAA batteries (Not provided)

Made in PRC

The characteristics can change without prior notice.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD). This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

ENVIRONMENTAL PROTECTION

(Destruction of batteries)

To remove the battery:

- Open the battery compartment and retrieve the battery.
 - THE BATTERY MUST BE REMOVED BEFORE THE UNIT IS GIVEN TO REBUS.
 - BATTERY CONTAINS NICKEL CADMIUM AND / OR LITHIUM AND / OR NICKEL-METAL HYDRIDE, THE BATTERY MUST BE ELIMINATED IN A SAFE WAY.
- DO NOT THROW IN A TRASH CAN, BUT GIVE IN CENTRE OF WASTE.

**Imported by Sotech International
" LE PERIPOLE " N°A 107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois – France**