

LOCAL AIR CONDITIONER

INSTRUCTION MANUAL



Dear consumer, please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ This appliance contains a UV emitter. Do not stare at the light source.
- ❑ Unintended use of the appliance or damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in little doses, cause harm to the eyes and skin.
- ❑ User replacement of the UV-C transmitter is not permitted.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.

- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage or injury caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution! Do not allow small children to play with the foil:
THERE IS A DANGER OF SUFFOCATION!
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- ❑ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc... & the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE

approved extension leads. Input power must be at least 16A, 250V, 3000W.

- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ This appliance is only intended for household use.

(* Qualified Person : the manufacturer's or importer's service technician or any other person qualified, authorized and competent to carry out this type of repair.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.



The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical

 


specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.

The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

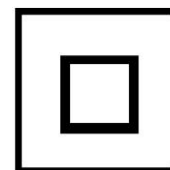

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

CLEANING AND MAINTENANCE

Always switch off the appliance, disconnect the apparatus and let it cool before cleaning.

Clean the outside of the apparatus with a sponge or slightly wet linen.

Never plunge the apparatus in water or all other liquid!

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

The machine should be cleaned at least once a month with a clean, dry and soft sponge or cloth.

Note : More frequent cleaning may be required due to depending on environmental conditions.

Do not put any foreign object or fingers inside the device.

Do not use gasoline, thinner and other strong cleaners on and / or in the device to clean the device as they will damage it.

Never use alcohol or other solvents.

Filters are not washable !

 
Notes: Make sure the HEPA filter is dry before inserting it into the device.

The filter should be cleaned once a month by a vacuum cleaner.


Filters should be replaced, at least, once every 6 months. More frequent replacement may be necessary due to depending on environmental conditions.

TO KNOW THE DEVICE

- 1. Control panel**
- 2. Device body**
- 3. Air inlet grille**
- 4. UV-C lamp**
- 5. Filters**
- 6. Base**
- 7. Base / body retaining screw of the device**

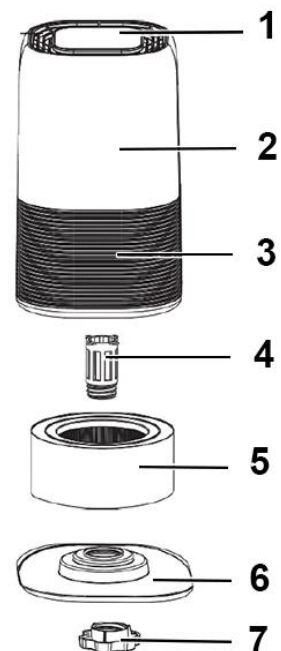

CONTROL PANEL

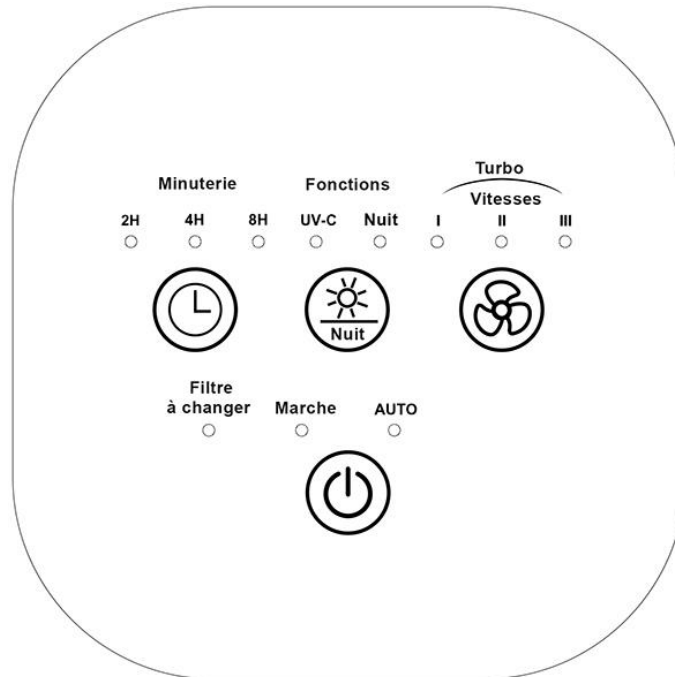 

Meaning of the keys

1. "TIMER" (Minuterie)

By pressing this button, the purifier can be programmed to run for 2 hours, 4 hours, or 8 hours.

Note : It will automatically stop when the time is up.

2. "UV-C / NIGHT" (Nuit)

Press this button once to turn on the UV lamp.

Press this button a second time to activate NIGHT mode.

 
 
Notes : The indicator flashes 10 times before every indicators darken and the air purifier automatically switches to low speed mode.

This function is very convenient for night use.

Press this button a third time to turn off the UV lamp.

Note : the standby mode indicator flashes 10 times, then the Night mode is at new activated without UV.


Press this button a fourth time to deactivate Night mode.

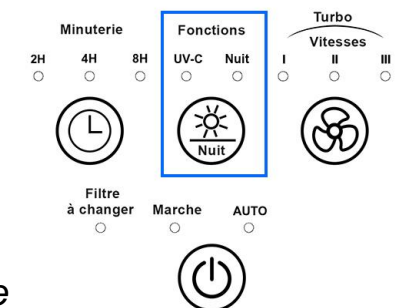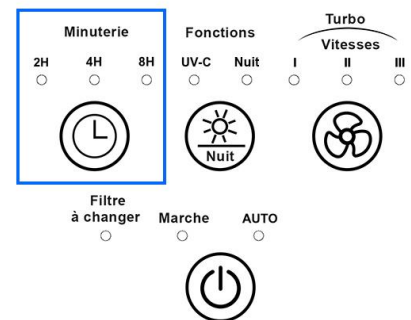

3. "SPEED" (Vitesse)

The fan speed can be adjusted while the unit is in operation.

 1. Slow speed.
2. Medium speed.
3. Fast speed.
4. Turbo.

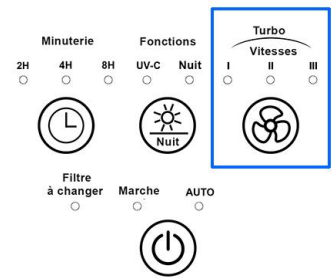


Notes : Each time this button is pressed, the speed changes according to the above modes. (Reminder : Slow, Medium, Fast, Turbo, back to Slow.)

In turbo mode, the three speed indicator lights are on.

4. FILTER CHANGING

 When this light comes on, the dust filter must be changed.
Proceed as explained in the paragraph below.

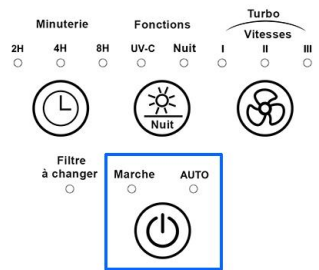

5. "ON / AUTO / OFF"

 
Press this button to turn on the device.

A second press activates the AUTO mode.

(The fan speed changes automatically depending on the air quality.)

A third press deactivates the AUTO mode.

A fourth press turns off the device.

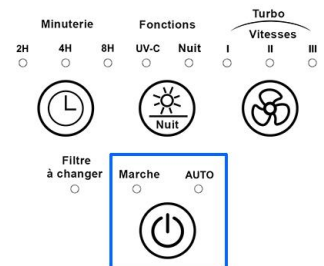

AIR CLEANING SYSTEM

PURPOSE : Improve the quality of indoor air with this new air purification system.

Several levels of filtration include a combination of :

1. A Pre-filter that traps large particles.
2. A HEPA filter that captures micro particles.
3. An activated carbon filter to eliminate bad odours.

PRE-FILTER: Captures large particles such as hair and animal dander.

HEPA FILTER: captures dust, smoke, pollen and allergens.

CARBON FILTER : Eliminates toxic vapours and bad odours.

FIRST USE

- remove the appliance and all accessories carefully.
- Clean the outside of the appliance with a damp sponge or cloth and wipe it.
- Install the appliance on a table or flat, stable and horizontal surface. Make sure there is enough space to operate the machine properly.
- This appliance is intended exclusively for domestic use.
- For good air circulation, place the appliance at least 30cm from the walls of the furniture.
- Make sure the air inlet and outlet grilles are not blocked.
- To move the air purifier, always lift and move the unit by carrying with hands.

USE

- Unwind the power cord completely.
- Check that the voltage in the country where you are, corresponds to that indicated on the device.
- Connect the appliance to a good electrical outlet, (earthed if the appliance is class I), to avoid any danger.
- Never modify the device.

FILTERS INSTALLATION AND REMOVAL

Method, frequency of cleaning, and necessary precautions.

Note : When the “filter change” indicator lights continuously red, it indicates that it is time to replace the filter.

Turn the device upside down and place it on a soft, stable surface.

1. Unscrew the screw under the base.
2. Turn the base counter clockwise (to the left).
3. Remove the cover.
4. Remove the dirty filter.
5. Insert a new filter into the unit.
6. Replace the base on the unit.
7. Turn the base clockwise.
8. Screw in the retaining screw.

 
After replacing the filter according to the above instructions, press the “Start” button for 5 seconds to reset the program.

The “filter change” indicator will go out.

*Notes: When the appliance is not in use, switch it off and unplug it.
The combined filter lasts about 6 months.*



The LED ring has four different colours to indicate the air quality, detected by the dust sensor. From blue / mauve to dark red. Dark red being the colour that indicates the poorest air quality.

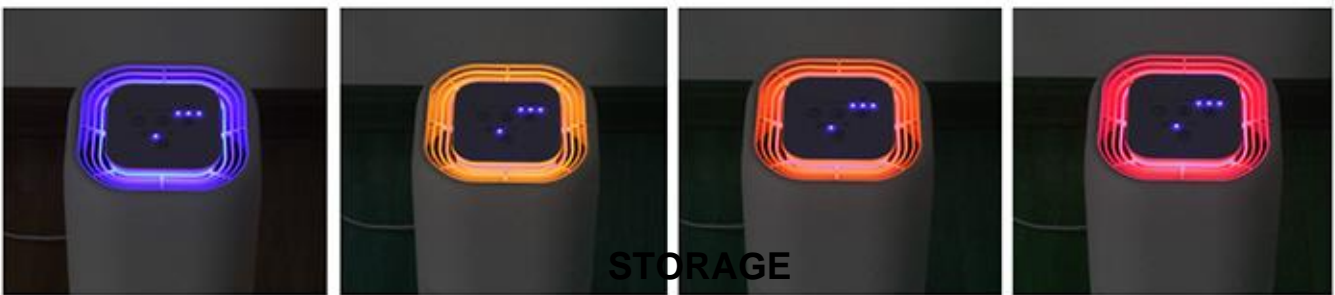

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are:

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay!
In the event of foreign intervention, the guarantee becomes null and void. After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	220-240V~ 50/60Hz
Norm	Class II
Power	45W
Filtration	100 m ³ / H (CADR)

The CADR - "Clean Air Delivery Rate", is an independent association that has tested for many years air purifiers that manufacturers want to compare to those on the market.

Made in PRC

The characteristics can change without prior notice.

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois – France**