

“RAP’ TOUT” MULTIFUNCTION FOOD PROCESSOR

INSTRUCTION

MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide. If you pass the device on to a third party, these Operating Instructions must also be handed over. Please keep them for future references.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Keep present instructions for future references.
- ❑ Check that your mains voltage corresponds to that stated on the appliance.
- ❑ Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- ❑ Only use the appliance in the way indicated in these instructions.
- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage or injury caused by incorrect use or improper handling.
- ❑ Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- ❑ This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and

knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children
- Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning and maintenance" in manual.
- Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning
- This device is not a toy, do not leave children or people with disabilities to play with.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner. If the supply cord or appliance is damaged, it must be replaced by

the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- ❑ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc... & the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.

- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.
- ❑ The item must not be left unattended when it is connected to main supply.
- ❑ The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- ❑ This appliance is only intended for household use.

 
SPECIAL WARNINGS FOR THIS APPLIANCE

- Repairs must only be performed by an authorized repairer.
- THIS PRODUCT IS INTENDED FOR PRIVATE HOUSEHOLD USE ONLY.
- Always unplug the power cable from the mains if it is left unattended and before any cleaning, maintenance and accessory installation. Precautions must be taken when handling accessories and cutting blades, during assembly, disassembly and during cleaning.
- Stop the unit and disconnect it from the power supply before changing accessories or approaching moving parts during operation.
- Potential injury may occur during misuse.

- For instructions on cleaning surfaces in contact with food or oil, please refer to the section "cleaning and maintenance" in the manual.
- For instructions on how to use accessories, operating time and speed settings, refer to the paragraphs below.
- During operation, make sure that the device is not used continuously for too long and also ensure sufficient rest time between two operations.
- Do not insert your finger into the feed tube. Always use the pusher to avoid injury.
- This unit is not suitable for cutting extremely hard products, such as nutmeg, coffee beans or some cereals.
- This appliance is not a meat grinder. Do not slice any type of meat with it.
- Keep hair, clothing and jewelry away from rotating parts.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

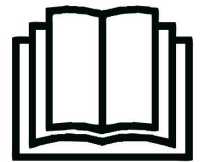

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications.



These standards are not mandatory but are guarantees of compliance with essential requirements.

The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "DOUBLE SQUARE" means a double insulated. A basic insulation and supplementary insulation. This device requires no connection to the mass of a protective conductor grounded. The materials are said : double insulation class II.

The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



For more information : <http://www.quefairedemesdechets.fr>

 
BEFORE THE FIRST USE

remove the appliance and all accessories carefully and pay attention to sharp accessories.

- Clean all accessories and bowls with soapy water and dry thoroughly.
- Clean the outside of the appliance with a damp sponge or cloth and wipe it.
- Install the appliance on a table or flat, stable and horizontal surface.
- Unwind the power cord completely.
- Check that the voltage in the country where you are, corresponds to that indicated on the device.
- Connect the appliance to a good electrical outlet, (earthed if the appliance is class I), to avoid any danger.
- Never modify the device.
- The device should not be left unattended when connected to the main power supply.
- The device must not be used if it has fallen and shows visible signs of damage.

TO KNOW IT'S UNIT

1. Pusher
2. Chimney for entrance of vegetables
3. On / Off switch
4. Base + Engine
5. Cone storage
6. Clamp screw
7. Cutting cone
8. Different types of cones

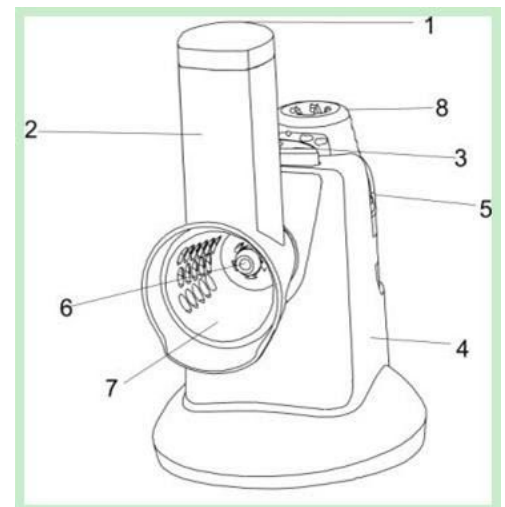

ACCESSORIES

Fine grater (Orange)

Or

Fat grater (Red)

Recommend to grate: carrots, cucumbers, zucchini, potatoes, radish, dry cheeses and chocolate.



Slicer (Light green)

Or

Thick slicer (Dark green)

Recommend to make slices of:
carrots, zucchini, potatoes, cucumbers,
peppers, onions, turnips, red cabbage, white
cabbage, apples or hard cheese.



Shredder Grater

 
Recommended for: dry bread, hazelnuts *,
walnuts *, almonds *, parmesan, chocolate,
cookies and other pastry.




MOUNTING

CONE HOLDER

1. Maintain inclined the cone holder (a quarter turned to the right) and insert it into the unit engine. on the front side.

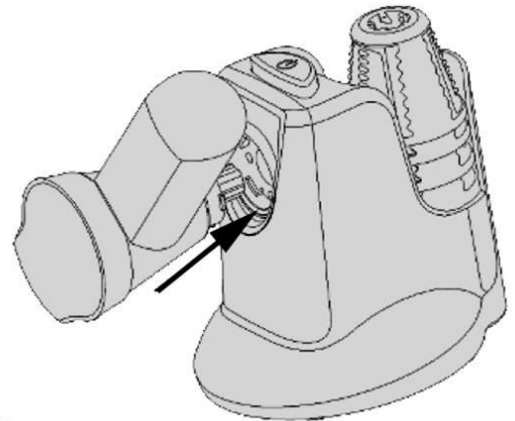

 
2. Turn the cone holder (a quarter turn) to the left until it clips.
Note : To remove the cone holder of its location on the drive shaft, Rotate a quarter turn to the right and remove it from the engine block by pulling it.

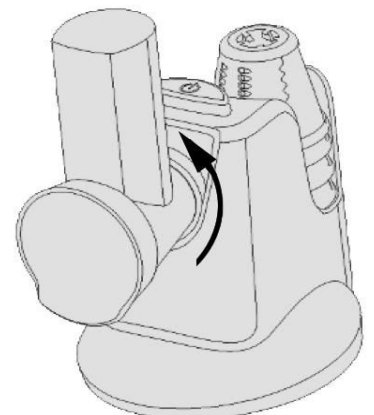

CONE

Make sure the cone holder is in place and secure.

 - Select the appropriate cone for the desired use.
- Unscrew and remove the cone clamping screw located on the axis of the device (2)
- Insert the cone (1) on the shaft (2) in the cone holder.
- Screw the fixing device (to the left) to secure the cone.
- *Notes : The cone should not be free on its axis if it is correctly installed.
After use, to remove the cone in place, turn the fastener clockwise out and remove the cone.*
- Clean the elements as described in the paragraph " Cleaning " and replace the fastener to prevent it from being lost.

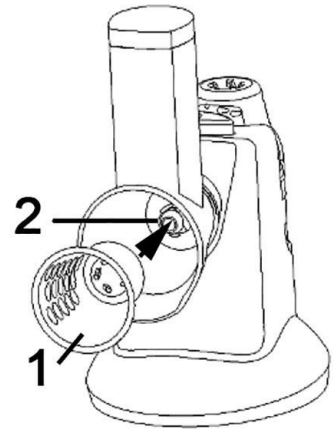


USE

1. Place the unit on a flat level, slip surface if possible.
2. Connect the equipment into an outlet properly installed.
3. Place a bowl under the opening of the cone holder to recover the shredded food.
4. Press the On / Off switch (1) briefly once or twice before placing food in the feed tube, to ensure that the cone is properly attached to the drive shaft of the motor.
5. Push on & Hold the On / Off button (1) and put the food to grate or slice in the tube. (2)

Note : (if necessary) Use the pusher to push food inside.

After use,

 6. Release the Start / Stop button to stop the unit.
 7. Remove the electric plug from the outlet.
 8. Remove the cone as described above.
 9. Clean the device and accessories after each use.
- Tip : Wash removable parts immediately under the tap, because once dry fruit pulp or leftover vegetable can be removed less easily.

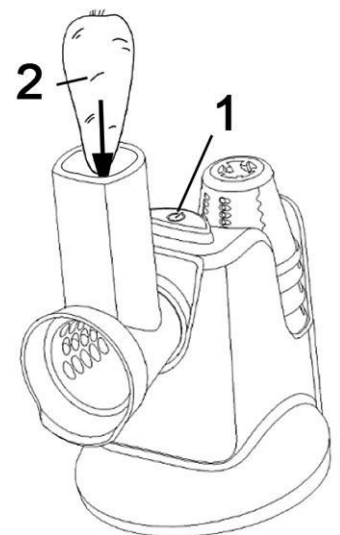

CLEANING AND MAINTENANCE

Be careful when handling the cones for cleaning. The stainless steel blade is extremely sharp and can cause severe cuts.

Always switch off the appliance, disconnect the apparatus and let it cool before cleaning.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like cones, holder, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

STORAGE

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control.

This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box).

Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee !

In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted.

Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply 220-240V~ 50-60Hz
Power 150W
Norm Class II

Made in PRC

The characteristics can change without prior notice.

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois - France**