


MINI BLUETOOTH LOUD SPEAKER

Instruction manual

1. Loud speaker
2. Micro USB socket
3. On/Off + Functions button
4. LED indicator
5. Hole to fix the carry handle
6. Microphone

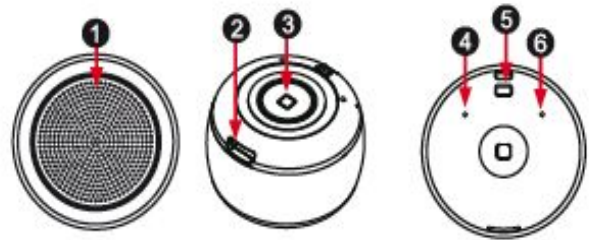

Charging the battery

Insert the small plug of the cable in the USB socket 2 of the speaker and the Big USB plug into 5V DC USB power terminal (like Laptop, Telephone USB socket ...).

The LED indicator 4 will turn on in red. After the charging is completed, the red indicator will turn off.

Note : When the music sound becomes low, and if you hear the warning tone "DI DI" plug the speaker to recharge it.

Bluetooth pairing

Turn on the speaker by pressing on the button for 3 seconds. The speaker will emit a sound and Blue indicator will flash.

Turn on and activate the Bluetooth function of your device (Phone, Tablet or Laptop ...).

Search the unit called BM2 on Bluetooth detected apparatus, and click to pair it. When the speaker is connected, he will emit a sound and Blue indicator will light on and don't flash any more.

- In the music mode, To increase the sound volume, just push briefly on the button 3.
- To answer to receiving phone call on the paired device, just push briefly on the button 3 to use the microphone and loud speaker of MINI BLUETOOTH SPEAKER.
- To take a photo or Selfy with your device, Activate the Photo function of your phone, Compose the photo and push briefly on the button 3. This will trigger the photo.

To turn off the loudspeaker, press the button for 4 seconds. The unit will emit a different sound from the sound emitted during the start-up.

Notes:

If you can not take picture under Android System, open setting => Camera setting and turn the volume to shutter. (Under IOS system).

Redo the Bluetooth connection.

If the music function does not work, reconnect the Bluetooth.

IMPORTANT SAFEGUARDS

- ❑ Please read these instructions carefully before use.
- ❑ Only use the appliance in the way indicated in these instructions.

- ❑ Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- ❑ Never use this apparatus near water projections.
- ❑ Never use this apparatus with the wet hands.
- ❑ If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- ❑ Inform potential users of these instructions.
- ❑ Never leave the appliance unsupervised when in use.
- ❑ The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- ❑ This device can be used by children aged 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ❑ This device is not a toy, do not leave small children or people with disabilities to play with.
- ❑ Cleaning and maintenance must not be made by children without supervision.
- ❑ Keep the appliance and its cord out of reach of children aged less than 8 years of age.
- ❑ In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- ❑ Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- ❑ From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- ❑ Never immerse the appliance in water or any other liquid for any reason whatsoever.
- ❑ Never place it into the dishwasher.

- ❑ Never use the appliance near hot surfaces.
- ❑ Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ This appliance is only intended for household use.

(*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance & disconnect the apparatus.
Clean the outside of the apparatus with a sponge or slightly wet linen.
Never plunge the apparatus in water or all other liquid !
Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control.
This apparatus is guaranteed 24 months starting from the date of purchase of consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase. The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay ! In the event of foreign intervention, the guarantee becomes null and void. After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	5V DC
Power	2W
Frequency rate	20Hz – 20KHz
Volume	> 90 DB
Speaker	4 Ohm
Battery	3,7V / 200mAh

The characteristics can change without preliminary preventing

CAUTION: Do not to open the case but to call upon a qualified technician for repairs.

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

ENVIRONMENTAL PROTECTION

(Destruction of batteries)

- THE BATTERY MUST BE REMOVED BEFORE THE UNIT IS GIVEN TO REBUS.
 - BATTERY CONTAINS NICKEL CADMIUM AND / OR LITHIUM AND / OR NICKEL-METAL HYDRIDE, THE BATTERY MUST BE ELIMINATED IN A SAFE WAY.
- DO NOT THROW IN A TRASH CAN, BUT GIVE IN CENTRE OF WASTE.

**Imported by Sotech International
" LE PERIPOLE " N°C111 à 115
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous bois - France**