

ELECTRIC SOUP MAKER

Instruction manual



TSM-1655



TSM-1656



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - By clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- Never place it into the dishwasher.
- Never use the appliance near hot surfaces.
- Do not operate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Never use the appliance outside and always place it in a dry environment.
- Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.

 
- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ The appliance must be used and rested on a table or flat & stable surface.

- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage or if it is leaking.
- Regarding the instructions for cleaning, please refer to the below paragraph of the manual.
- This appliance is only intended for household use.
- Warning: Avoid spilling on the connector.
There is a potential risk of injury if used incorrectly.
The surface of the heating element may remain hot for some time after use.
- Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- CAUTION Ensure that the blender is switched off before removing it from the stand.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning

(*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this

GENERAL INFORMATION


The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

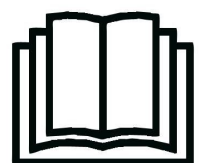

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



 The symbol "STEAM" warns the user that steam can escape from the unit and to take all necessary precautions. (Risk of burns)

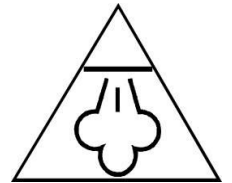

The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.



The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.



The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate collection (eg recycling bin, waste, voluntary intake point).



 
For more information : <http://www.quefairedemesdechets.fr>

ELEMENTS DESCRIPTION



1. Control panel
2. Safety cover with handle
3. Internal stainless-steel container
4. Electrical connector
5. Filling detector (anti-overflow)
6. Blender knife blades

CONTROL PANEL

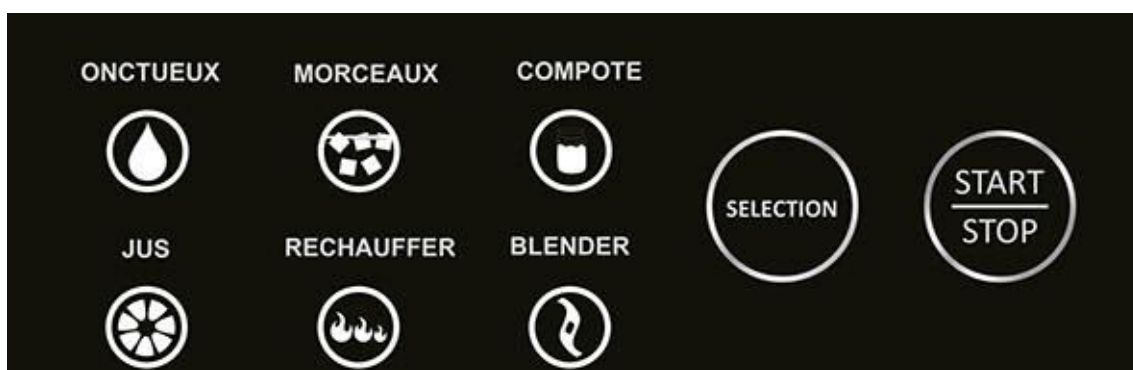

DESCRIPTION OF CONTROLS AND FUNCTIONS

"ON / OFF" button

This key is used to start and stop the device by confirming the selected function. In case of error in the choice of function, Press the "On / Off" button for 2 seconds. The device will return to selection mode and it will be possible to choose another function.

"SELECTION" KEY

This key is used to choose a function or a type of soup :

Smooth : Mixed and heated ingredients.

Pieces : Heated ingredients and left in pieces

Compote or jam : Mixed Ingredients to make a Jam or a compote.

Juice or Smoothie : Cold mixed ingredients to make an excellent juice or smoothie. Possible to put ice cubes for a very fresh rendering.

Reheat : Allows you to reheat a liquid or soup without the risk of burning the mixture.

Blender and Cleaning : This button has 2 functions. It allows you to completely mix the ingredients incorporated in the bowl. It is used to clean the bowl by using hot water.

Creamy soup

The "Smooth" program is perfect for delicious soup recipes that require a smooth consistency, such as tomato soup. The program guarantees that the ingredients will be mixed to the right consistency and cooked gently at the right temperature. The program lasts 21 minutes, before the soup is ready to serve and enjoy !

Chunk Soup

The chunk soup program is perfect for rustic soup recipes that require a larger consistency, such as lentil soup. The program guarantees that the ingredients will be heated longer to ensure that large pieces are fully cooked.

The program lasts 28 minutes, before the soup is ready to serve and enjoy !

Note : For this function, there is no mixing process, the mixture will only be heated. It is therefore recommended to cut all the vegetables into small pieces the size of a die.

Jam and Compote

The jam function is perfect for preparing a delicious jam.

The program lasts 18 minutes. The cooking will be perfect to obtain the ideal structure for a delicious jam.

Juices and Smoothies

The "juice" function is ideal for preparing fruit juices, smoothies or milkshakes from fresh ingredients.

The program lasts 2 minutes before your drink is ready to serve.

This function does not heat the ingredients.

Note : Do not put ice cubes in the appliance with this function.

Warm up

The program lasts 20 minutes to warm soup or milk.

Mix / clean

This function allows you to further mix the preparation to the desired consistency.

This program has no predefined duration. Press the On / Off button on the device to stop it.

This function works without heating.

When cleaning, fill with half hot water and run the appliance for several minutes.

Stop the blender and empty the water. Repeat the operation if necessary.

For a more thorough cleaning, take all the necessary precautions not to cut yourself with the knife blade of the blender.

FIRST USE

Before first use, remove the unit and all accessories carefully and paying attention to the sharp accessories.

Clean with soap and water, bowls and all accessories. Rinse and dry thoroughly.

Clean the outside and inside of the machine cabinet with a damp cloth and wipe dry.

USE

Connect the appliance to the mains.

⇒ All icons flash.

Press the "Selection" button to choose a program.

⇒ The icon of the selected program will light up.

Press the On / Off button and the device will start operating.

At the end of the program, the appliance beeps for 1 minute and all the icons flash.

After 60 seconds, the icons will go out and the device will shut down automatically.

CLEANING AND MAINTENANCE

Before cleaning, Always : switch off the appliance, disconnect the apparatus and let it cool.

Clean the outside of the apparatus with a sponge or slightly wet linen.

The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.

Never plunge the apparatus in water or all other liquid !

Do not use abrasive cleaners, gritting, or metal brush or another cutting object.

If cooked rice sticks to the bottom of the rice bowl fill the rice bowl with warm soapy water and let stand for approximately 10 minutes.

STORAGE

-Ensure the unit is completely cool and dry.

-Do not wrap the cord around the appliance, as this will cause damage.

-Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase of consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warranty plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS


Power supply	220-240V~ 50/60Hz
Power (Motor)	140-160W
Power (Heating)	800-1000W
Norm	Class I

Made in PRC

The characteristics can change without prior notice.

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

 Note : In the event of question concerning the earth or electric connection, please consult a qualified personnel.

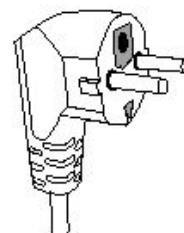

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This device complies with EC directives, it was controlled according to all current European directives, applicable such as: electromagnetic compatibility (EMC) and low voltage (LVD).

This device has been designed and manufactured in compliance with the latest regulations and technical requirements for safety.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois - France**