

TEPPAN YAKI / GRILL

INSTRUCTION MANUAL



Dear consumer, Please read these instructions carefully before use in order to avoid damage due to incorrect use and to better understand the functions of this product. Please pay particular attention to the safety guide.

If you pass the device on to a third party, these Operating Instructions must also be handed over.

Please keep them for future references.

IMPORTANT SAFEGUARDS

- Please read these instructions carefully before use.
- Keep present instructions for future references.
- Check that your mains voltage corresponds to that stated on the appliance.
- Only use the appliance for domestic purposes and household or similar applications such as:
 - staff kitchen areas, in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - Environment type like :
 - Farm Houses • Bed and Breakfast.
- Only use the appliance in the way indicated in these instructions.
- Never use this unit near bathtub, shower, wash-hand basins or other containers with water.
- Never use this apparatus near water projections.
- Never use this apparatus with the wet hands.
- If, unfortunately the apparatus is wet, immediately withdraw the cord of the socket-outlet.
- Inform potential users of these instructions.
- Never leave the appliance unsupervised when in use.
- The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.
- Children and persons with disabilities are not always aware of the danger posed by the use of appliances.
- This device can be used by children aged from 8 years and older and adults, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the

appliance in a safe way and understand the hazards involved.

- ❑ Children shall not play with the appliance.
- ❑ This appliance is not a toy, do not leave children or people with disabilities to play with.
- ❑ Keep the appliance and its cord out of reach of children aged less than 8 years of age when it is energized or cooling down.
- ❑ Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph of the manual.
- ❑ Cleaning and user maintenance must not be made by children unless they are older than 8 and supervised.
- ❑ In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- ❑ Caution ! Do not allow small children to play with the foil :
THERE IS A DANGER OF SUFFOCATION !
- ❑ From time to time check the cord for damages. Never use the appliance if cord or appliance shows any signs of damage.
- ❑ Never immerse the appliance in water or any other liquid for any reason whatsoever.
- ❑ Never place it into the dishwasher.
- ❑ Never use the appliance near hot surfaces.
- ❑ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person^(*) in order to avoid a hazard.
- ❑ Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- ❑ Never use the appliance outside and always place it in a dry environment.
- ❑ Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.

- ❑ Never use any other connector than the one provided.
- ❑ Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- ❑ Never wind the cord around the appliance and do not bend it
- ❑ Ensure that the power cord does not come into contact with hot parts of this unit.
- ❑ Make sure the appliance has cooled down before cleaning and storing it.
- ❑ The temperature of accessible surfaces may be very high when the appliance is operating. Never touch these parts, of apparatus, to avoid burning itself.
- ❑ Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.
- ❑ Before cleaning, always unplug the appliance from the power supply and let it cool down.
- ❑ This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- ❑ Always place the unit on a flat surface. Ensure, also, not to cover the device and not to put anything on it.
- ❑ Always remove the plug from the wall socket when the appliance is not in use.
- ❑ When using an extension lead always make sure that the entire cable is unwound from the reel. Use solely CE approved extension leads. Input power must be at least 16A, 250V, 3000W.
- ❑ Incorrect operation and improper use can damage the appliance and cause injury to the user.
- ❑ This device, designed for home use, complies with standards relating to this type of product.
- ❑ This appliance is only intended for household use.
- ❑ Regarding the instructions for cleaning, thanks to refer to the below paragraph of the manual.

(*) **Competent qualified person** : after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

SPECIAL WARNING FOR BBQ & GRILL

WARNING: Charcoal or similar combustible fuels must not be used with this appliance.

Take care not to scratch the specific coating of the hob because:

- o small fragments of this coating could mingle with food
- o the surface is irreparably damaged.

To avoid this, use a wooden spatula or a heat-resistant plastic model.

The Teppan Yaki Grill is equipped with a high quality non-stick coating. Pass a little oil on the plate before the first use. No fat is needed later.

WARNING :

1. In case of overheating of the device, the thermostat of built-in safety is triggered, causing the device (and indicator light) to turn off automatically.


Action:

- o Unplug the device
- o Wait 10 to 20 seconds and plug the unit back in. This will be ready for use again.

2. The temperature of the accessible surfaces may be high when the appliance is in use.

GENERAL INFORMATION

The symbol "OPEN BOOK" means a recommendation to read important things contained in the record.

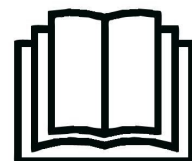

The symbol "BIN" crossed out, abbreviation WEEE (Waste of Electrical and Electronic Equipment) means that at the end of life, it should not be discarded with household waste, but filed to the sorting of the locality. Waste recovery can help preserve our environment.



The symbol "CE" is the guarantee of compliance with harmonized European standards, voluntary, reflecting the essential requirements into technical specifications. These standards are not mandatory but are guarantees of compliance with essential requirements.




The symbol ROHS (Restriction of use of some Hazardous Substances) on the Environmental Protection, certifies that for each of the five hazardous substances • Lead • Mercury • (hexavalent) chromium • products for protection against flames PBB and PBDE, the peak concentration is equal to or less than 0.1% of the weight of homogeneous material, and 0.01% for the 6th • cadmium.



The symbol "HOT WALL" warns the user that the walls of the unit can become very hot, and to take precautions as required.



The symbol "GLASS / FORK" means that the device is compatible and can come into contact with foodstuffs.

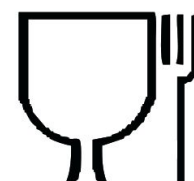

The symbol "TRIMAN" indicates that the consumer is invited to dispose the product as part of a separate



collection (eg recycling bin, waste, voluntary intake point).

For more information : <http://www.quefairedemesdechets.fr>

The symbol "CMIM marking" is the guarantee of compliance with the harmonized Moroccan Standards, optional, which translate the essential requirements into technical specifications. These standards are not mandatory but guarantee compliance with the essential requirements.

BEFORE FIRST USE

- Clean the grill and the accessories (Cf. "Cleaning and care"). It is recommended to heat up the grill for about 10 minutes without any foodstuff in order to eliminate the grease that may have adhered during manufacture and The unit, might emit light smell. It is however no consequence and will be Briefly.
- Ventilate the room during this period.
 1. Connect the main plug to a suitable socket
 2. Set the desired temperature by means of the temperature control OFF/MIN/1/2/3/4/5. The indicator lamp lights up.
 3. As soon as this temperature is attained, the light goes off then on, indicating that the thermostat maintain the correct temperature.
 4. Always turn the temperature control OFF/MIN/1/2/3/4/5 to "OFF", to switch off the grill.
 5. Pull out the mains plug from the socket and pull the plug from the connecting socket.
 6. Carry the grill only by the handles
 7. Let the grill cool down outside the reach of the children.

CAUTION: Grill surface is very hot during use.



USE

- Unroll the power cord completely.
- Check that the tension in force in the country where you are corresponds to that indicated on the apparatus.
- Connect the apparatus in a correct socket-outlet, (and connected to the ground if the unit is Class I), to avoid any danger.
- Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.
- Stand the appliance on a table or flat & stable surface.
- The item must not be left unattended when it is connected to main supply.
- The item is not to be used, if it has been dropped or if there are visible signs of damage.
- Never modify the appliance in anyway.
- Insert the plug with thermostat into the appliance (cf "Assembly"), make sure the thermostat is on its minimum position and put the plug in an earthed power socket.
- Select the cooking temperature using the thermostat knob. The pilot light will come on, indicating that the appliance is heating.
- Preheat the grill to reach the ideal cooking temperature. When the appliance reaches the desired temperature, the pilot light will go out.
- Now put the foodstuffs onto the grilling surface.
- The grilling times vary according to the nature of the foodstuffs and to your personal taste.
- When grilling is finished switch off the grill and disconnect it.

PRACTICAL HINTS

- Frozen food should always be thawed before it is grilled.
- To grill meat, put the thermostat in its maximum position and preheat the grill. For other ingredients, choose the temperature accordingly.
- Never scratch the special non-stick coating. Use a wooden spatula or a heat resistant plastic spatula.

CLEANING AND CARE

- Before cleaning, put the thermostat in its minimum position and make sure that the plug has been removed from the mains supply socket.
- Let the grill to cool down thoroughly and unplug the thermostat from the appliance.

- Never immerse the appliance or the plug in water or any other liquid. However, should there be water on the electric connection, wait until the appliance is completely dry before using it anew.
- Wipe the outer surfaces of the grill with a damp cloth and dry afterwards.
- The parts (removable) in contact with food like plate, bowl, forks, Spatula etc. can be washed in hot water with sponge and soft detergent or put in the dishwasher.
- Do not use harsh abrasive cleaners as these might damage the non-stick coating.

HINTS FOR CARE AND USE OF NON-STICK SURFACE

- To avoid scratching the non-stick surface, do not stack objects on grill.
- Use medium to low heat for best cooking results. Very high temperatures can cause discoloration and shorten the life span of any non-stick surface. If higher temperatures are necessary, preheat on medium for a few minutes.
- Use only nylon. Plastic or wooden utensils with care to avoid scratching the non-stick surface.
- Never cut food on the grill.
- Remove stubborn stains with a plastic scouring pad and mild dish washing liquid.

STORAGE

- Ensure the unit is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place and out of reach from children.

GUARANTEE

Before being delivered, all our products are subjected to a rigorous control. This apparatus is guaranteed 24 months starting from the date of purchase by the consumer.

The documents in proof of guarantee are :

- The invoice and
- The filled and stamped warrantee plate (located on side or bottom of the gift box). Without these documents in proof, no free replacement, nor no free repair, can be carried out.

During the warranty period, we deal for free, the defects of the apparatus or the accessories, rising from a defect of materials or manufacture by repair or, replacement. The services within the framework of the guarantee do not involve any extension of the warranty period and does not give right to a new guarantee ! In the event of recourse to the guarantee, bring back the complete apparatus to your retailer, in its original packing, accompanied by the proofs of purchase.

The breakage of parts out of glass or plastic is, in all the cases, not warranted. Defects on the accessories or the wearing parts (for example: coals of engines, hooks, drive belts, remote control of replacement, teeth brushes of replacement, webs etc) as well as cleaning, maintenance or it replacement of wearing parts are not guaranteed and are thus to pay !

In the event of foreign intervention, the guarantee becomes null and void.

After flow of the warranty period, repairs can be carried out, against payment, by a specialized trade or a repair service.

SPECIFICATIONS

Power supply	220-240V~ 50Hz
Power	1800W
Norm	Class I

Made in PRC


The characteristics can change without prior notice.

To provide additional protection, the installation, in the electrical circuit supplying the bathroom, of residual current device (RCD) of rated residual operating current, not exceeding 30mA, is recommended. Ask your installer for advice.
NOTE: A circuit breaker is not a residual current device (RCD).

This unit is equipped with an electrical outlet with earth and must be earthed in an according plug.

Note : In the event of question concerning the earth or electric connection, please consult a qualified personnel.

In the event of short-circuit, earthing reduces the risk of electric shock while making possible the current to be evacuated by the wire of ground.

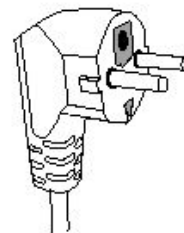

CAUTION: In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.

This apparatus satisfied EC directives, it was controlled according to all the European current directives, like: electromagnetic compatibility (EMC) and low tension (LVD).

This apparatus was designed and manufactured in respect of the last safety regulations and technical specifications.

**Imported by Sotech International
" LE PERIPOLE " N°A-107
33, Avenue du Marechal de Lattre de Tassigny
94120 Fontenay sous-bois - France**